

Ocean Images & Co., Inc.
641 SW 4th Street, Unit 1
Cape Coral, FL 33991

Phone: (800) 409-2469
(239) 458-7155
Fax: (239) 458-1558
Email: keith@oceanimagesinc.com
Web: www.oceanimagesinc.com



Your Ocean Images housing is designed to provide years of trouble-free service with a minimum of care. It is constructed of durable, corrosion resistant materials that are well suited for the marine environment. These instructions outline the procedures needed to operate and maintain your underwater video housing.


Dolphin VX/PD Series Underwater Video Housing Instruction Manual & Maintenance Guide

Includes Sony Models VX2000/VX2100 and PD150/PD170

Installing your camera in the Dolphin VX/PD Series Housing

- Release the spring catches and remove the rear faceplate. Inspect the inside of the housing for dirt, especially the port. If any dirt is found, remove it, as it will certainly end up on the port lens. Clean the port lens if fingerprints or foreign matter is found. A common lens cleaner and soft cloth will work fine.
- Once you are satisfied that the inside is clean, you may prepare your camcorder for loading. Install a good quality tape, a memory stick and a freshly charged battery in the camcorder. Remove the lens cap and lens protector. Unhook the camera carrying strap from the front attachment point to insure that the camera fits into the housing without being wedged. Once the camera is in place you can position the strap around the camera in an open area. Release the tray lock thumbscrew and slide the tray from the housing. Attach your camcorder to the tray by first positioning the front of the camera in the tray cradle using the appropriate hole that lines up with the camcorder tripod mounting hole. Tighten the mounting screw just enough to hold the base secure; do not over tighten.
- Now you are ready to insert the camcorder into the housing. Plug the control-L cord into the LANC jack on the front of the camcorder. Extend out focus auto/manual control shaft on left side of the housing by pulling out to provide clearance when installing the camcorder. Carefully slide the camcorder into the housing by engaging the tray into the track of the housing. Slide the camcorder all the way in and tighten the tray thumb screw just enough to keep tray from moving. Note: If using the optional external 4" monitor, plug the monitor cable into the A/V jack of the camcorder. Once camcorder is installed push the focus auto/manual control shaft back in so that it properly contacts the camcorder focus auto/manual control.
- Before fastening the rear faceplate, be sure the quad seal ring is seated in it's groove and the quad ring and mating surfaces are clean. **Be sure that the quad ring is not rolled in the groove.** It is very important to inspect the condition of this seal and housing surface to be sure it is clean and in place. Failure to do so may result in a flooded housing and a damaged camcorder. Ocean Images & Co., Inc. does not warrant your camcorder in the event of damage due to flooding.
- A thin seal of silicone grease should be applied to lubricate the O-ring seal. Now, position the faceplate over the housing and align the catch hooks with the catches. Put all the catches in the hooks and adjust the alignment of the faceplate by centering it on the housing, then draw down the opposite catches together. Note: The rear mounted controls can be pulled out a short distance so they do not contact the camcorder controls while installing the rear face plate.
- Inspect the O-ring seal; A black line should form when the O-ring is squeezed in the cover groove.

Your Dolphin VX/PD Series Video System is now ready for use.

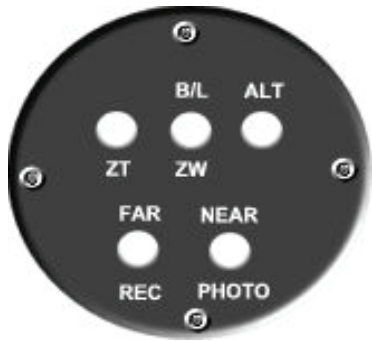

VX/PD Series Push Button Control



The right side handle contains the push button control console. The push buttons turn on and off the various camcorder functions through the electronic control module. The electronic control module, located inside the housing, translates the signals from the push buttons to Control-L signals for the camcorder.

The **Mode Control** knob on the clear rear door rotates to 3 positions--"Off", "Memory" or "Camera".

Memory--To store photos on the memory stick, turn the Mode switch to **Memory** and press the **Photo** button. Slight vignetting may occur with your camcorder in **Memory** mode at the fullest wide-angle setting. This may be corrected by using ZT to zoom in a small amount from full wide-angle.

Camera--To record onto tape, turn the Mode switch to **Camera** and press the **REC** button to start and stop recording. To store a 7-second still sequence on tape press the "**Photo**" button.

ZOOM is controlled with the buttons labeled **ZT (Zoom Telephoto)** and **ZW (Zoom Wide)**. Press and hold either button until the desired amount of zoom is achieved.

The **ALT** button toggles between **normal** and **alternate** mode. In **ALT** mode functions shown on the labels above the buttons are active (**B/L, FAR, NEAR**). The red light on the control pack indicates the status -- "on" in the **ALT** mode, "off" in the normal mode. **Note:** The **ALT** mode changes settings -- go back to normal mode to operate (shoot video or stills). Manual backlight will stay activated until turned off (in **ALT** mode).

The manual **FOCUS** control toggles manual and auto focus. When activated, the **FAR** and **NEAR** buttons control the focus. This function is very useful when shooting under conditions of low contrast. With the camcorder in auto focus, switch to manual and the subject will stay in focus, providing the camera-to-subject distance does not change. The **B/L** button controls Backlight on and off. This is a useful function when video taping a scene that aims into blue water or toward the surface.

The **PHOTO** button serves a dual purpose; it also restores power to the camera after it goes into sleep mode or shuts off after 5 minutes of idle use.

The **Rear Housing** manual controls are:

1. White Balance—toggle on/off
2. White Balance—select
3. Mode Control—toggle power on/off and toggle video/memory stick.

For further information on use of these controls, consult the camcorder user manual.

NOTE: *Opening the oil-filled push button control console will damage the console and void your warranty.*