

Ocean Images & Co., Inc.
641 SW 4th Street Unit#1
Cape Coral, FL 33991

Your Ocean Images housing is designed to provide years of trouble-free service with minimum care. It is constructed of durable, corrosion resistant materials that are well suited for the marine environment. These instructions outline the procedures needed to operate and maintain your underwater video housing.

Phone: (239) 458-7155
Fax: (239) 458-1558
Email: Keith@oceanimagesinc.com
Web: www.oceanimagesinc.com



Mini Digital Housing with Top Mounted 4 Inch Flat Screen Monitor

Top Mounted 4 Inch Flat screen monitor System Instruction Manual & Maintenance Guide

The Top Mounted 4 Inch Flat Screen Monitor System includes the following items:
Machined aluminum Housing with 4 inch flat screen monitor assembly
A/V Cable with a lumberg waterproof connector

Note: The Monitor uses 6 AA size dry batteries with an expected battery life of 4 hours.
To conserve battery power, turn off the monitor when not in use

1. Disconnect the safety latches on the back of the monitor body and remove the battery cover
2. Install a fresh set of AA sized batteries
3. Make sure that the o-ring is in place and then re-attach the battery cover
4. Attach the monitor system to the top of your housing using the attaching mechanism
5. Attach the A/V cable from the monitor to the Lumberg waterproof connector on the housing body making sure that the cable is positioned correctly with the alignment lugs
6. Install your camcorder into the housing body and then plug the A/V cable from the housing to the A/V or A/V-R connector on the camcorder.
7. Turn on the monitor using the top mounted on/off knob.
8. Now when the camcorder is turned on the image will appear on the 4 inch flat screen monitor.

On some camcorders you may need to go into the Menu setup to change the camcorder to send out the video signal to a remote monitor.

After the Dive the monitor should be thoroughly rinsed in fresh water and the batteries should be removed.

Some silicon lube can be installed into the end of the A/V cable and the lumberg waterproof connector to help keep the connector pins clean.

NOTE: When storing the Easy View Monitor Back, ALWAYS remove the batteries.